


battery monitor


BMV-600




Included

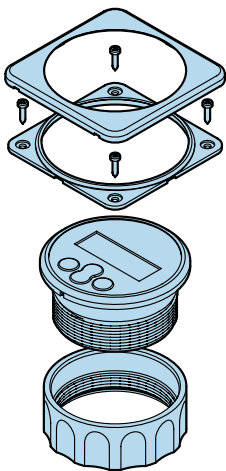


Battery monitor

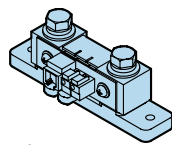

Shunt

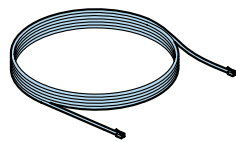

UTP cable

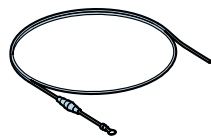

Pos. supply cable


WARNING

Please read this guide carefully to avoid wrong connections that cause battery monitor malfunction and/or fire hazards



Disconnect the negative pole of the battery before installation!



Wiring diagram

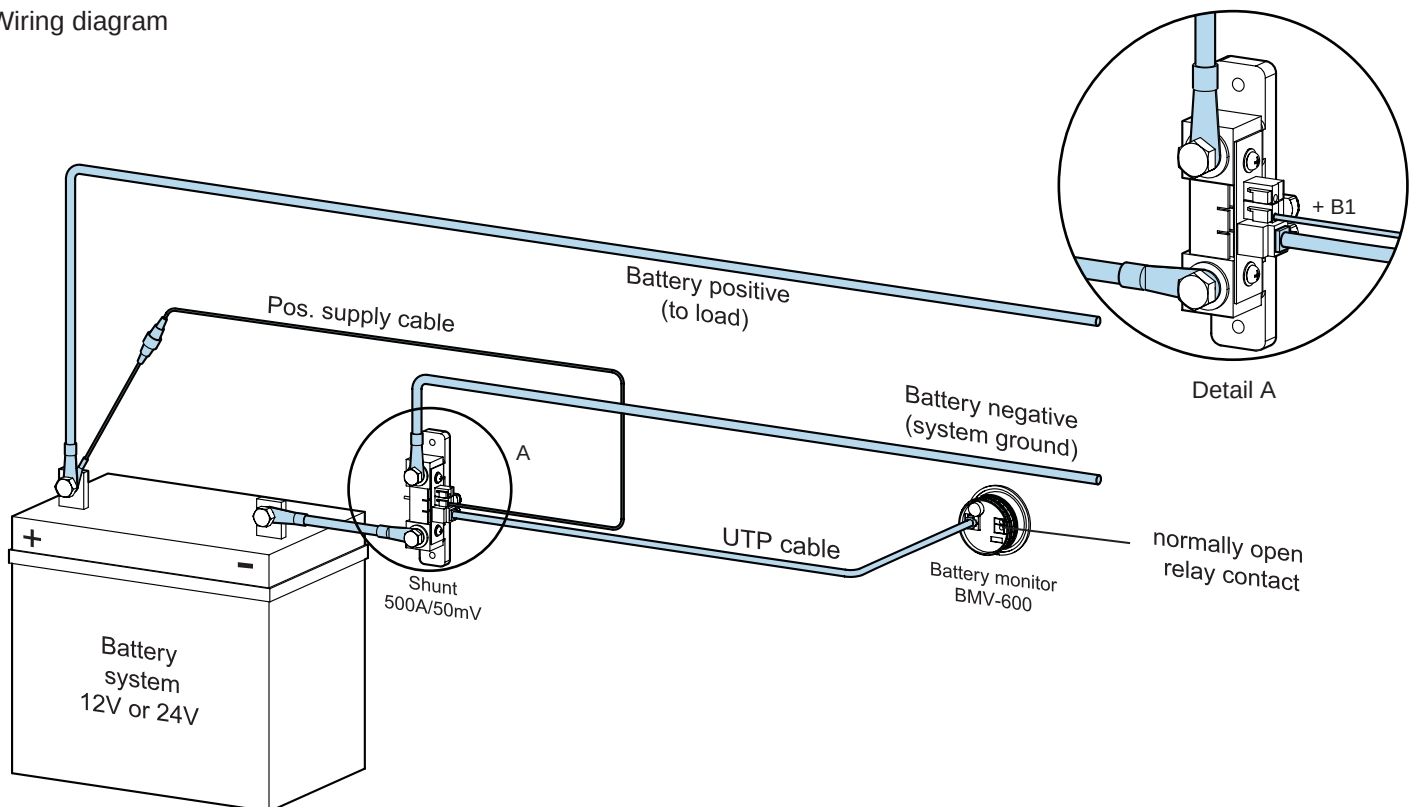


 Connect the negative pole of the battery last !

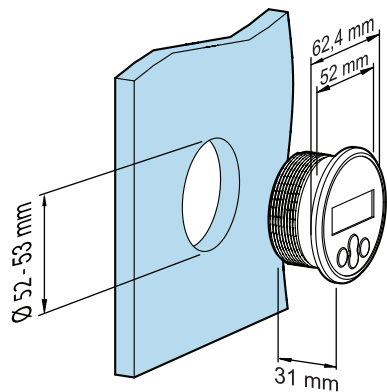


1

Method A

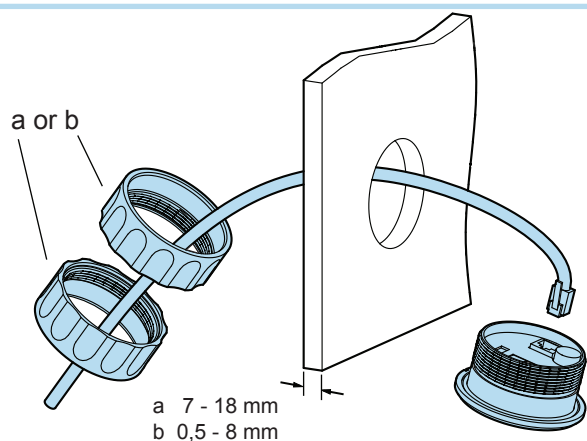


2

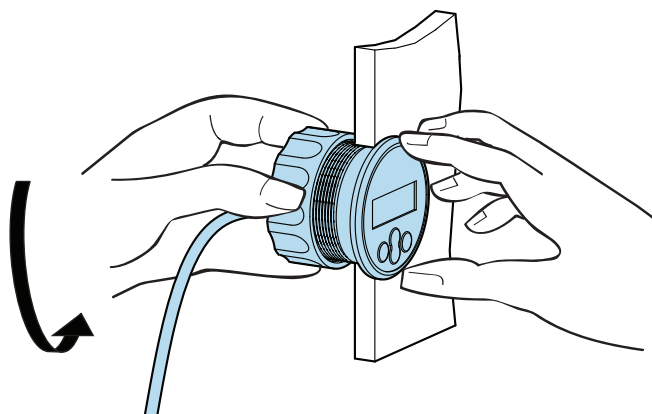


3


OR Method B

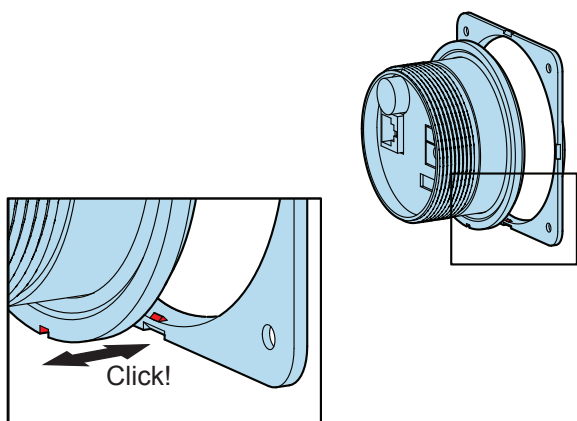


2

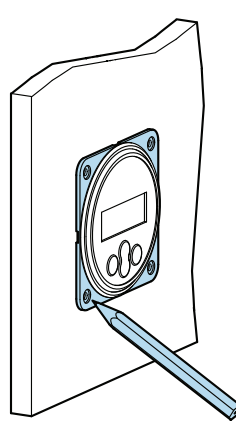

3

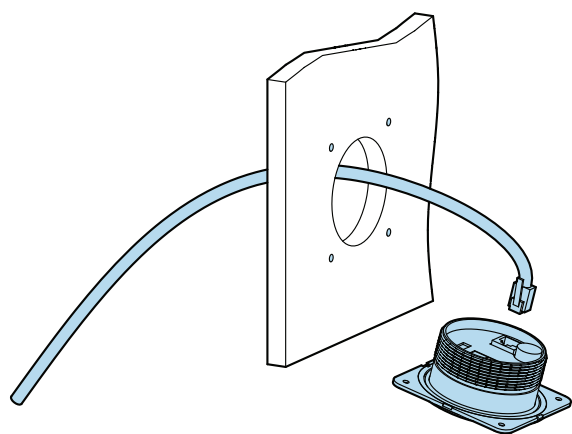

4

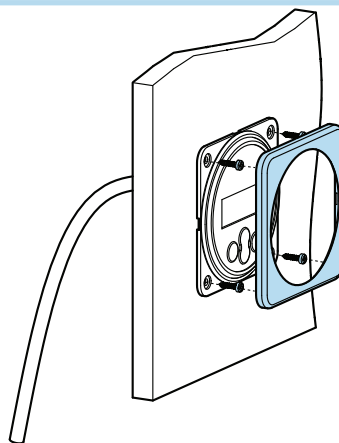

5

